

# Bluelink<sup>®</sup>

## Activation Guide (AUS) Version 1.0



Hyundai Bluelink<sup>™</sup>  
The future at your fingertips.

Bluelink<sup>®</sup>

# 1. In-vehicle Activation

1. Start your vehicle then turn the navigation system on.
2. Select 'Bluelink' in the Multimedia menu.
3. Select 'Bluelink Settings'.
4. Select 'Activate Service' then 'Activate'.
5. Select 'Agree' (agree to the *Terms of use* and *Privacy notice*).
6. Select 'OK'.

(Bluelink is now activated in-vehicle, you now have access to features like Connected Routing, SOS and ACN)

1




2



3




4

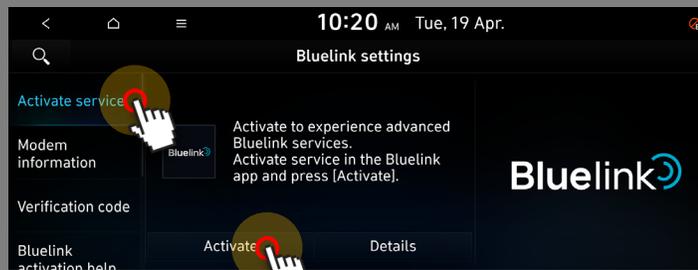

5




6

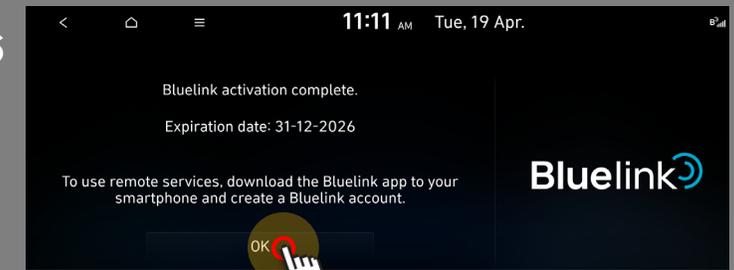

## 2. Pairing your vehicle to your account

1. Login to the Bluelink app.
2. Add Vehicle (Select More → Vehicle Selection → Add)
3. Agree to Terms & Conditions
4. Agree to Privacy policy
5. Scan QR code in vehicle (Under Bluelink → Bluelink settings → Modem information)
6. Enter 6-digit verification code from in-vehicle (Under Verification Code)

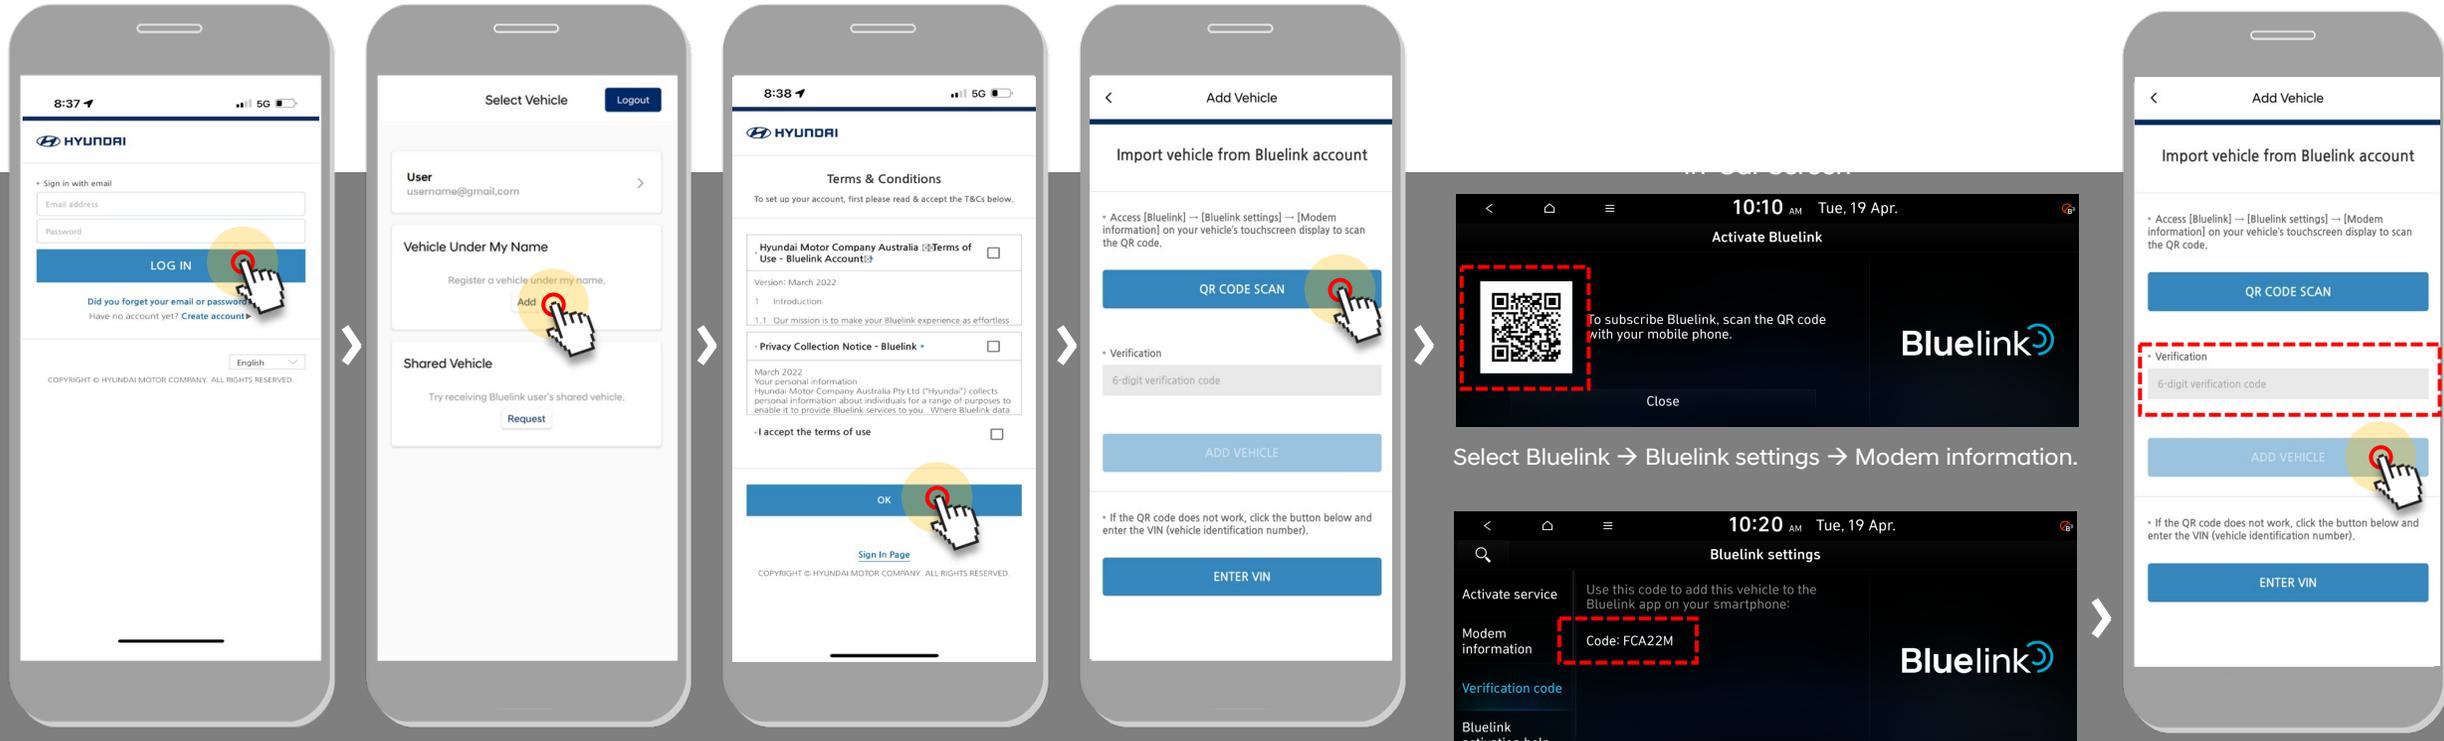

1. Login (Note: You need to create an account first. Please see user guide)

2. In the 'More' menu select 'Vehicle Selection' then 'Add'

3/4. Agree to Terms & Condition + Privacy Policy

5. Select 'QR Code Scan' and scan the in-vehicle QR Code.

Enter code into the Bluelink app.

6. Enter verification code displayed on the screen & select 'Add Vehicle'