

## Adjusting rear seats

Before driving, adjust the seat to the proper position for passengers or cargo.

## WARNING

---

Take the following precautions:

- Adjusting the seats
  - NEVER attempt to adjust the seat whilst the vehicle is moving. The seat may suddenly move and may injure the passenger.
  - Make sure that the seat is locked in place after the adjustment. If not, the seat might move unexpectedly resulting in an accident.
- Folding the seats
  - Do not fold the seatback when the seat is occupied (for example, passenger, pets or luggage). It may injure the passenger or pet, or damage the luggage.
  - Never allow passengers to sit on top of the folded down seatback whilst the vehicle is moving. This is not a proper seating position and no seat belts are available for use. This could result in serious injury or death in case of an accident or sudden stop.
  - Objects carried on the folded down seatback should not extend higher than the top of the front seatbacks. This could allow cargo to slide forward and cause injury or damage during sudden stops.
  - When returning the rear seatback from a folded to an upright position, hold the seatback and return it slowly. Ensure that the seatback is completely locked into its upright position by pushing on the top of the seatback. In an accident or sudden stop, the unlocked seatback could allow cargo to move forward with great force and enter the passenger compartment, which could result in serious injury or death.
- Loading cargo
  - Make sure the engine is off, the gear shifted to P (Park), and the parking brake is securely applied whenever loading or unloading cargo. Failure to take these steps may allow the vehicle to move if the shift lever or shift dial is inadvertently pressed or rotated to another position.
  - Cargo should always be secured to prevent it from being thrown about the vehicle in a collision and causing injury to the vehicle occupants.
  - Do not place objects in the rear seats, since they cannot be properly secured and may hit vehicle occupants in a collision causing serious injury or death.
- Be careful when closing the tailgate with passengers seated on the third row seat. If the passenger's head is not properly against an adjusted headrest or a tall person is seated, the tailgate may hit the passenger's head, which could cause injury.



## CAUTION

Do not allow your hands or fingers to get caught in the seat mechanisms whilst adjusting the seats.

## NOTICE

To prevent damage to the vehicle:

- Rear seat belts


Before folding the seatback, insert the seat belt buckle in the holder between the seatback and cushion. And insert the seat belt webbing in the guide to prevent the seat belt from being damaged.

- Cargo

Be careful when loading cargo through the rear passenger seats to prevent damage to the vehicle interior.

## 2nd row seat adjustment (Manual)


### *Forward and rearward adjustment*

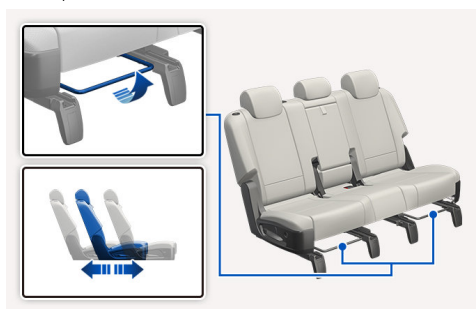

Slide the seat whilst pulling up and holding the seat slide adjustment lever. Release the lever at the position you desire.

Adjust the seat before driving, and make sure the seat is locked securely by trying to move forward and rearward without using the lever. If the seat moves, it is not locked properly.

## Seatback angle adjustment

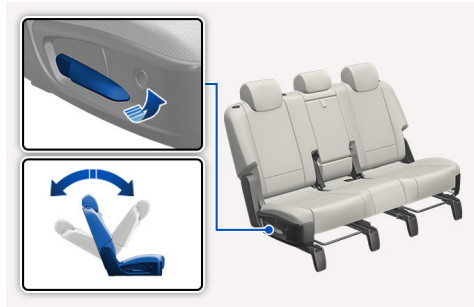


- 1 Pull up the seatback recline lever.
- 2 Hold the lever and adjust the seatback of the seat to the position you desire.
- 3 Release the lever and make sure the seatback is locked in place. The lever **MUST** return to its original position for the seatback to lock.

## 2nd row seat adjustment (Power)

**+** if equipped

### Adjustment switch

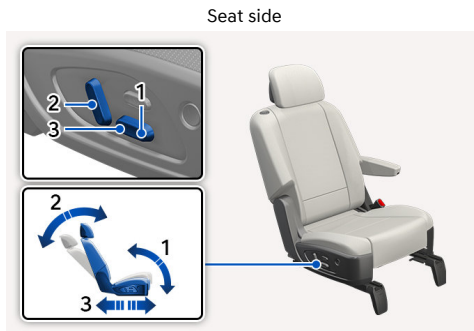

No.	Description
1	<p><b>Seat cushion angle adjustment</b></p> <p>Push the front portion of the control switch up or down to control the seat cushion angle.</p>
2	<p><b>Adjusting the seatback angle</b></p> <p>Push the control switch forward or rearward to adjust the seat to the desired position</p> <p><b>Seatback folding/unfolding</b></p> <p>With the gear in P (Park), the seat belt unfastened, and the door open, fold the seatback forwards as far as possible, and pull the upper area of the seatback angle control switch forwards. The seatback is locked in the folded position.</p> <p>To unfold the seatback, pull the upper area of the seatback angle control switch rearwards.</p> <p>If you stop pulling the switch while the seatback is folding or unfolding, the seatback stops moving. To resume, pull the switch again.</p>
3	<p><b>Forward and rearward adjustment</b></p> <p>Seat side switch: Push the control switch forward or rearward to adjust the seat to the desired position.</p> <p>Cargo trim side switch (if equipped): When you press the 2ND switch, turns on indicator for selected seats. Push the left (L) or right (R) switch of the 2nd row seat to the desired position.</p>

## Information

To prevent damage to ambient components, seatback angle adjustment (1) and cushion angle adjustment (2) may be limited depending on the position of the 2nd row seating.

### *Using relaxation mode (7-Seater)*

 if equipped

This mode provides a balanced sitting posture optimised for rest, distributing the body's load evenly to reduce the burden on joints. This helps relieve fatigue.

### **WARNING**

- Do not use relaxation mode whilst driving. The driver's attention is distracted, and this may lead to accidents.
- Be careful not to get any body parts or objects caught when the feature is in use.
- Using this feature whilst driving may increase the risk of injury in the event of an accident. Use this feature only when the vehicle is parked or stopped.
- If you use this feature while wearing the seat belt, the seat belt may not be properly fastened, increasing your risk of injury in the event of an accident.

## CAUTION

---

- Before using this feature, check for any passengers or objects in the rear seats. Ensure sufficient space between the front and rear seats before using this feature.
  - Do not use two different switches simultaneously. The seating system may be damaged.
- 



- 2nd row behind the driver seat: Push the control switch rearward to move back. The seat back will be tilted back.
  - Relaxation function would not operate if you locate the driver seat to the farthest position.
- 2nd row behind the passenger seat: Push the control switch long to locate the passenger seat to the desired position. Then the rear seat moves to the rear end and the seatback will be tilted back.

## Information

---

The front passenger seat will not move in the following cases:

- When there is a person in the front passenger seat
  - When the seat belt buckle on the front passenger seat is fastened
  - When the front passenger door is open
- 
- When the rear seat moves forward, you can recline the seat by using the angle control switch.
  - If you adjust the Relax Mode switch or the seat adjustment switch (seatback angle adjustment, cushion angle adjustment, leg rest angle adjustment), it will stop to operate.
  - Once the operation is complete, you can adjust the seat directly using the seat adjustment switch for a more comfortable position.
  - After adjusting the seat position, pressing the front part of the relaxation switch 3 times in about 2 seconds will memorize the current position as the return position.
  - If the front part of the relaxation switch is pressed and held, the seat will return to the previously saved seat position (initial setting position).


## Information

---

When the relaxation mode is activated in the second row seat on the front passenger side, the front passenger seat may be adjusted to a specific position (if equipped).

---

### Resetting a seat

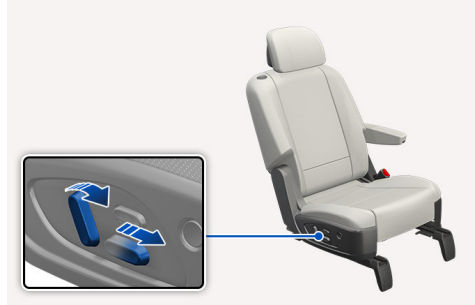

- 1 With the Engine Start/Stop button ON, bring the vehicle to a complete stop, and open the door of the seat you wish to reset.
- 2 Pull the seat forward as far as possible, and adjust the seatback to the fully upright position.
- 3 Push the seat's forward/backward switch and seatback angle control switch forwards, simultaneously for about 2 seconds. Adjust the headrest height to the up position.
- 4 An audible warning sounds 3 times, and seat resetting begins (if equipped).
- 5 The resetting process is complete after the seat, seatback angle and cushion angle are returned to their original positions.

## Information

---

- When resetting is complete, adjust the seat to fit the occupant.
  - Before resetting, move the front seats to a position that can avoid any interference during the resetting process.
- 

### Conditions that disable seat resetting

The resetting process and audible warning stop, if:

- the seat control switch is pressed,
- you drive the vehicle at the speed of 5 km/h or above
- the door of the seat to be reset is closed, or
- the ignition is changed to the OFF position.

## NOTICE

---

- If resetting stops before the process is complete, restart the resetting procedure. The use of relaxation mode may be limited if resetting has not been completed.
  - Before resetting the Relaxation mode, make sure there are no objects on or around the seat.
-


## Information

---

After resetting is completed, adjust the seat to the desired position.

---

### ***Walk-in switch***

 if equipped

### **WARNING**

When folding and sliding the 2nd row seat to access the 3rd row, ensure the vehicle is completely stopped. Only operate the switch after any occupants or passenger of the 2nd row seat have disembarked. Do not press the button to fold the seat if someone is seated or disembarking from the 2nd row seat, as sudden seat movement may result in injury.

---

### **Tilting walk-in seat (7,8-Seater, right side seat)**

### **CAUTION**

Never operate the walk-in switch if the seat is occupied by any passenger or if any object, including a Child Restraint System, is present on the seat. The walk-in feature is not intended to operate under these conditions. Before activating the walk-in feature, the driver must ensure that the seat is completely unoccupied and free of all objects.

---

- 1 Store the 2nd row seat belts in the storage holder.
- 2 When you press and hold the walk-in switch at the top of the 2nd row seat seatback or on the outside of the seat, both the seat cushion and seatback tilt forwards and the seat moves.



- 3 Hold your seat and safely get into or out of the 3rd row seat.

Type A (7/8-seater, manual type): After entering or exiting the 3rd row seats, push the seat rearward and return the seatback to its original upright position.

Type B (7-seater, power type): After entering or exiting the 3rd row seats, return the seat cushion and seatback to the upright position by pressing the walk-in switch and pushing the forward/rearward switch and seatback control switch rearwards.

Type C (8-seater, power type): After entering or exiting the 3rd row seats, push the seats back and secure them. Then, press the walk-in switch and push the seatback control switch rearwards to raise the seatback to the upright position. Return the seat cushion to its original position, using the front lever.

## CAUTION

Do not operate the walk-in function when the seatback of the 2nd row seats are folded.

### Sliding walk-in seat (8-Seater, left side seat)

- 1 Store the 2nd row seat belt in the storage holder.
- 2 When you press and hold the walk-in switch at the top of the 2nd row seat seatback or on the outside of the seat, the seat moves forward.  
If necessary, move the 2nd row seats forwards using the forward/reverse lever.



- 3 Hold the seat to safely get in or out of the 3rd row seat.  
Type A (manual type): After entering or exiting the 3rd row seats, push the seat rearward, and return the seatback to its original upright position.  
Type B (power type): After entering or exiting the 3rd row seats, push the seats back and secure them. Then, press the walk-in switch, push the seatback control switch rearwards to raise the seatback to the upright position, and then return the seat to its original position using the forward/reverse lever.


## Information

If a seat is located in the centre of 7-seater, it moves together when using the seat adjustment of the 2nd row seat behind the driver seat.

### Walk-in switch may not operate properly when:


- When the 2nd row seat belt is fastened
- When the vehicle is moving more than 3 km/h
- When the gear is not in P (Park)

### *Emergency seat folding strap (8-Seater)*

 if equipped

If the walk-in switch does not work, get out of the vehicle by pulling the seat folding strap in case of an emergency.

2nd row right side seat

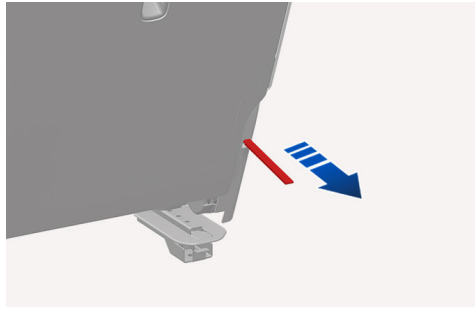


- Manual adjustment: Pull the seat folding strap to fold 2nd row seats. Hold the seat and lower it safely.
- Power adjustment: Pull the seat folding strap to move forward the 2nd row seats.

### **WARNING**

Never attempt to pull the strap whilst the 2nd row seat is occupied as the seat may suddenly move and cause the passenger on the seat to be injured. Use only the strap when the walk-in switch does not work.

## Integrated rear-seat control

 if equipped


This feature is used to provide comfort to 2nd row and 3rd row passengers by adjusting seat settings, such as ventilation, heating, position, and tilt.

To turn on this feature, select **Home screen** > **Seats** in the infotainment system settings. Change specific settings for the 2nd row and 3rd row seats, such as ventilation, heating, position, and tilt.

For more information, refer to the infotainment system manual.

### 3rd row seat adjustment (Manual)


#### *Seatback angle adjustment*

 if equipped

3rd seat



Cargo side trim

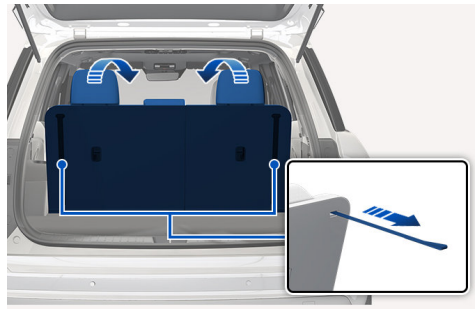

- 1 Pull up the seatback recline strap.
- 2 Hold the strap and adjust the seatback of the seat to the position you desire.
- 3 Release the strap and make sure the seatback is locked in place. The strap **MUST** return to its original position for the seatback to lock.

### 3rd row seat adjustment (Power)

#### *Forward and rearward adjustment*

 if equipped


3rd row side trim



Cargo side trim (Type A)



Cargo side trim (Type B)

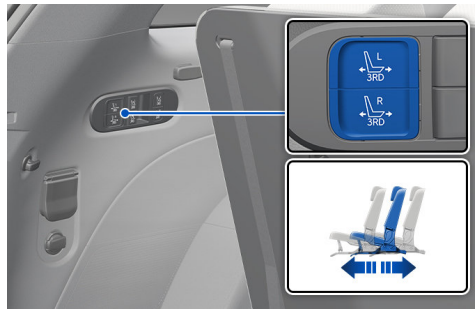

- 1 Press the 3rd row seat forward and rearward adjustment switch located on the left and right of the 3rd row side trim and cargo side trim.
- 2 When the adjustment is complete, release the switch.

### ***Seatback angle adjustment***

**+** if equipped



- 1 Press the 3rd row seat back angle adjustment switch located on the left and right of the 3rd row side trim.
- 2 Carefully lean back on the seat and adjust it to the desired position.
- 3 When the adjustment is complete, release the switch.

### **Folding the rear seats**

The rear seatbacks can be folded to facilitate carrying long items or to increase the luggage capacity of the vehicle.



#### **WARNING**

Never allow a passenger to sit on a seat that is folded or not fully unfolded while the vehicle is moving. Serious injuries or death may occur if the passenger is not properly seated with the seatbelt properly worn.


- 1 Locate the seat belt toward the outboard position before folding down the seatback to avoid the seat belt system interfering with the seatback.

- 2 Lower the rear headrests to the lowest position.
- 3 Route the seat belt webbing through the rear seat belt guides to prevent the belts from being trapped behind or under the seats.


### ***Manual adjustment***

#### **2nd row seat**

- Pull the seatback folding lever (2nd row seat) to completely fold the seat toward the front of the vehicle. Make sure the seatback is locked in place.

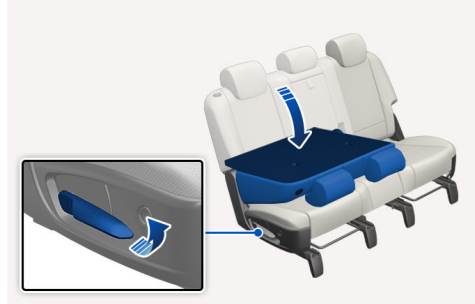

- When using it as a seat, pull the seatback folding lever (2nd row seat) to fully raise the seatback. Adjust the seatback to the desired angle and release the lever to lock in place.

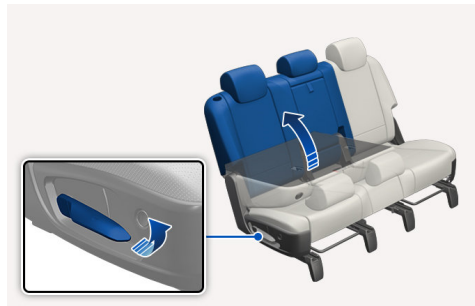


#### **3rd row seat**

- Pull the seatback angle adjustment strap to completely fold the seatback forward. Make sure the seatback is securely locked in place.




- When using it as a seat, pull the seatback angle adjustment strap to fully raise the seatback. Adjust the seatback to the desired angle, and release the upper angle adjustment strap to lock in place. Make sure the seatback is locked in place.

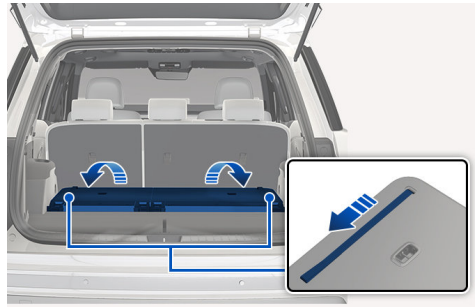


**⚠ CAUTION**

- Be careful when loading cargo through the rear passenger seats to prevent damage to the vehicle interior.
- When cargo is loaded through the rear passenger seats, ensure the cargo is properly secured to prevent it from moving whilst driving.
- Unsecured cargo in the passenger compartment can cause damage to the vehicle or injury to it's occupants.


## Power adjustment


 if equipped

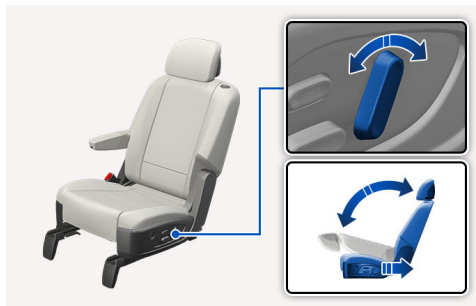

- With the gear in P (Park), the seat belt unfastened, and the door open, fold the seatback forwards as far as possible, and pull the upper area of the seatback angle control switch forwards. The seatback is locked in the folded position.
- If you stop pulling the switch while the seatback is folding or unfolding, the seatback stops moving. To resume, pull the switch again.
- When the seat is folded, pull the upper part of the seatback angle control switch rearward to unfold the seatback.
- Once the seatback is raised, lightly shake it back and forth to ensure it is securely locked before driving.




## Seatback remote folding (Luggage compartment)

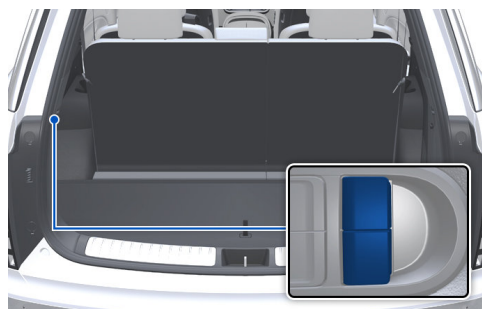 if equipped



This feature can make it easier for you to fold or unfold the 2nd row, 3rd row seatback when the tailgate is open.

- 1 Press the folding/unfolding switch located on the luggage compartment.
  - If you stop pulling the switch while the seatback is folding or unfolding, the seatback stops moving. To resume, pull the switch again.
  - When folding or unfolding the seatback, press or pull the switch and hold it until the seatback is fully folded or unfolded and movement stops.
  - If the Engine Start/Stop button is ON whilst folding or unfolding the seatback, the operation will temporarily stop. Once the vehicle is running, the operation will resume.
- 2 Once the seatback is folded forward, the space can be used for cargo.
- 3 If the seatback does not fold down completely, push it to make sure it's fully folded.

Type	Operation
A 	When you press the switch, the left (L) or right (R) seatback of the 2nd row seat folds.
B 	When you press and hold the ALL switch, the seatbacks of all 2nd row or 3rd row seats fold. To unfold the seatbacks, pull and hold the ALL switch. When you press and hold the 2nd row optimisation mode switch, the 3rd row seatbacks fold, and the 2nd row seats move to the optimal position for passengers' comfort. Select the 2nd or 3rd seats. The status indicator for the selected seats turns on. When you press and hold this switch, the left (L) or right (R) seatbacks of the selected seats fold. To unfold the seatbacks, pull and hold the switch.
C 	When you press and hold the 2ND switch, the left (L) or right (R) seatbacks of the 2nd row seats fold. To unfold the seatbacks, pull and hold the switch.

Type	Operation
	When you press and hold the 3RD switch, the left (L) or right (R) seatbacks of the 3rd row seats fold. To unfold the seatbacks, pull and hold the switch.

**⚠ WARNING**

- Always check for any occupants or passengers in the 2nd row and 3rd row seats before folding. Do not fold the seat if there are pets, luggage, passengers sitting in the 2nd row and 3rd row seats, or when passengers are getting off the vehicle. A sudden movement of the seat may cause injury.
- Never allow a passenger to sit on a seat that is folded or not fully unfolded while the vehicle is moving. Serious injuries or death may occur if the passenger is not properly seated with the seatbelt properly worn.


**Information**

When the tailgate is closed, the remote folding switch does not work.

**Armrest (2nd row seat)**

**⚠ CAUTION**


- When using the 2nd row seat folding function, use it after raising the armrest to the highest position.
- The armrest may be damaged if you sit on it or apply excessive load.

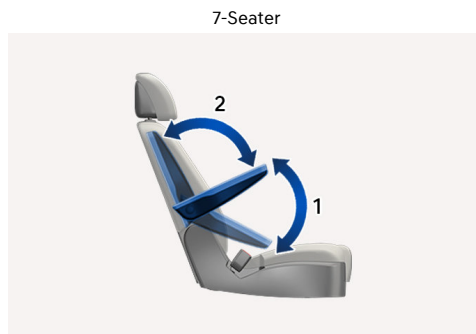

Pull the armrest forward to the lowest position, then raise the armrest to secure it at a comfortable angle.

- After fixing, the lower adjustment is not possible. If lower adjustment is desired, raise the armrest to the highest position and lower it to the lowest position before adjusting.
- After use, lift it up and place it in the top position.

8-Seater

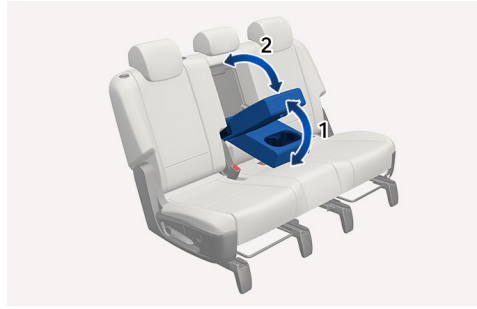

Pull the armrest down from the seatback to use it.