









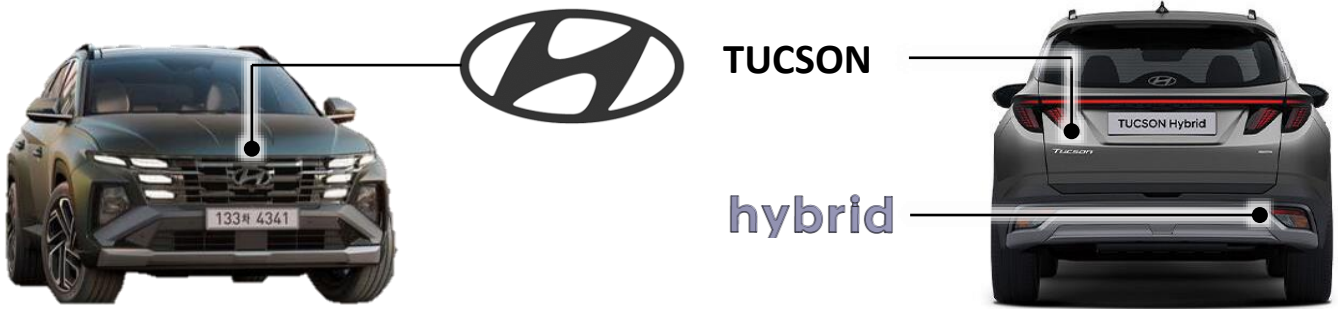

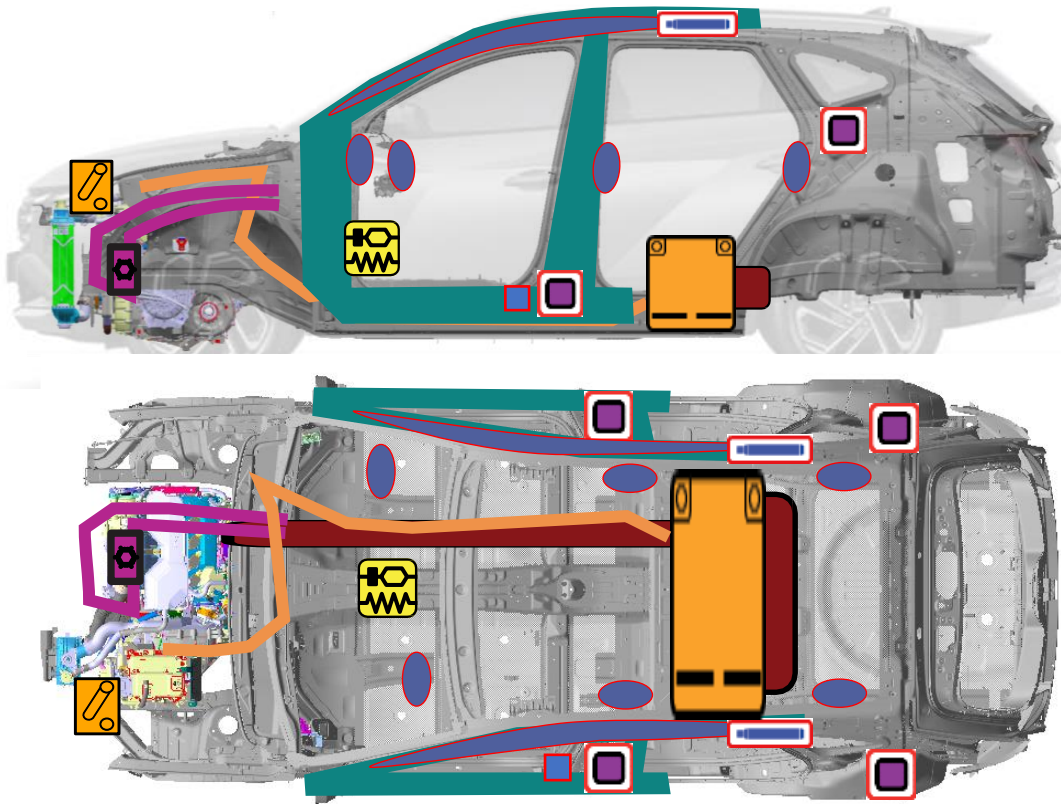





Vehicle Identification/Recognition






Accessing Vehicle





 Supplemental Restraint System Control Module (SRSCM)	 Airbag	 Airbag Inflator
 High voltage cable	 Seat belt pretensioner	 Air-conditioning line
 Service Plug	 12V battery (-) connector	 Advanced High Strength Steel
 High Voltage Battery	 Air-conditioning component	 Gasoline fuel tank & Line
 12V battery	 Anchor pretensioner	

Disabling Vehicle

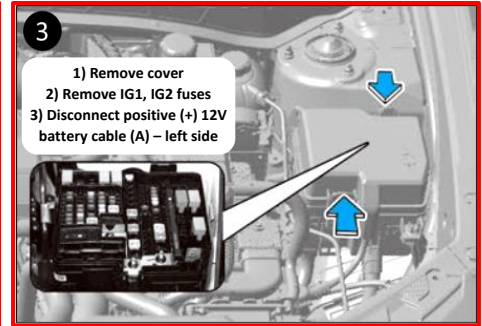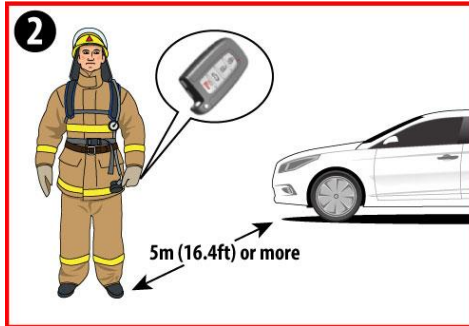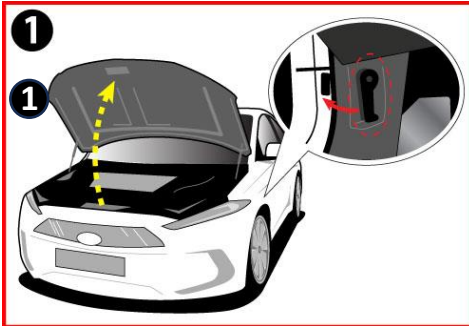


To Prevent Accidental Restart

OR

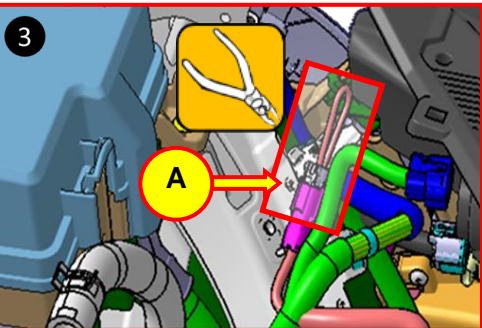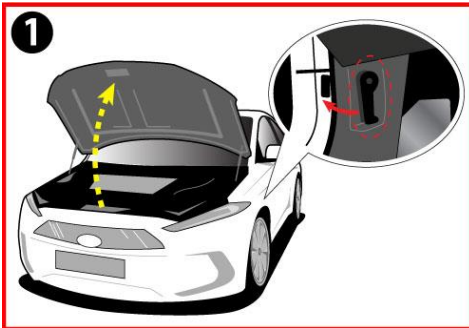

Vehicle Towing Information

Tow the vehicle using a flat bed or using wheel dollies. Never tow the vehicle with the front or rear wheels on the ground

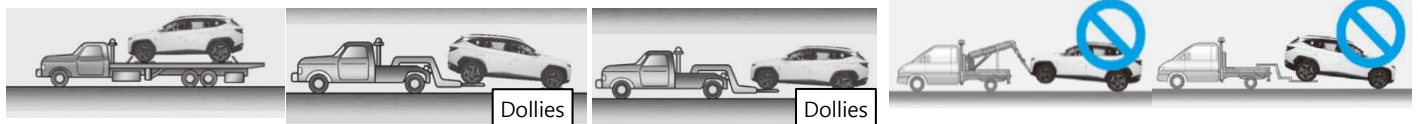

For further information, please refer to the Emergency Response Guide (ERG).